


Multistage Thermostats

Provide low voltage control of multistage heating, cooling and heating/cooling systems. Thermostats for heat pump systems are also available. All models require a Q674 subbase.

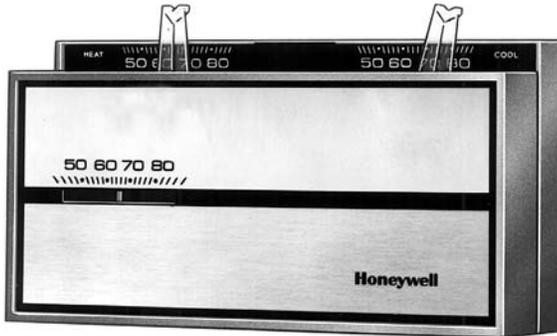


| ORDERING INFORMATION | | |
|----------------------|------|------|
| ORDER # | HEAT | COOL |
| T874A1036 | 1 | 1 |
| T874A1176* | 1 | 1 |
| T874B1019 | 1 | 2 |
| T874C1018 | 2 | 1 |
| T874C1141* | 2 | 1 |
| T874D1165 | 2 | 2 |
| T874E1016 | 0 | 2 |
| T874F1015 | 2 | 0 |

* DoD Special

Thermostat Subbases

Provide wiring terminals, mounting base, and system and fan switching for the T874 multistage thermostats.

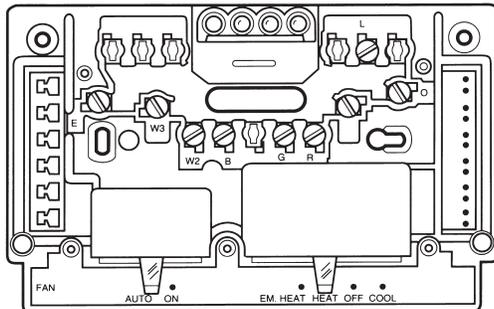

| ORDERING INFORMATION | | |
|----------------------|--------------------|----------|
| ORDER # | SYSTEM | FAN |
| Q674A1019 | Heat-Auto-Cool | Auto-On |
| Q674B1034 | Heat-Off-Cool | Auto-On |
| Q674B1075 | Heat-Auto-Cool | Auto-On* |
| Q674C1058 | Off-Auto | Auto-On |
| Q674D1040 | None | None |
| Q674E1049 | Off-Heat-Auto-Cool | Auto-On |

* For auto fan in heat and cool modes

Key Lock Covers for T874 Thermostats

Easy-to-install key lock cover replaces the thermostat cover without removal or adjustment of the thermostat. No screws or mounting accessories are required. Ideal for office areas, lobbies, stores, restaurants, clinics and other areas where protection of the T874/Q674 is needed. Covers both the stat and the switches.

Four easy steps to install:

1. Remove existing cover
2. Throw away cover
3. Snap-on new guard
4. Lock and remove key



TG504A1025



TG504A1033

| ORDERING INFORMATION | |
|----------------------|--------------------------------|
| ORDER # | DESCRIPTION |
| TG504A1025 | T874 Guard with Thermometer |
| TG504A1033 | T874 Guard without Thermometer |