


UNIVERSAL REPLACEMENT KITS For Pneumatic Thermostats

Why stock 5 brands?

Use a Pneuline Universal Replacement Kit and Save!

- Get familiar with installing and calibrating **ONE SERIES** of stat.
- Replaces **MOST** old style pneumatic stats.
- **FREE** cross-reference replacement help.
- **ELEVEN** models to choose from.
- **ALL** parts are in **ONE BOX**.

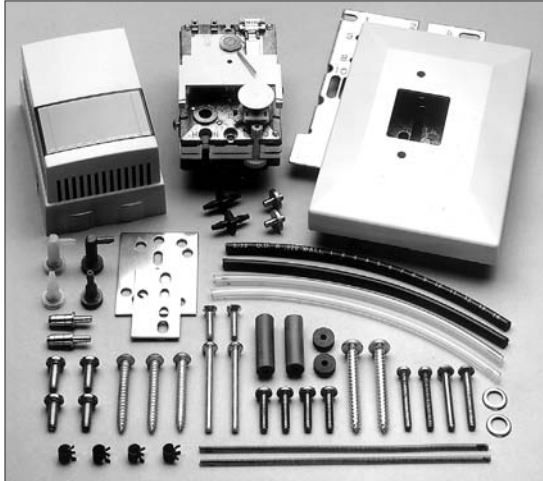

SINGLE PRESSURE ORDERING INFORMATION	
KIT #	DESCRIPTION
840DA	Direct Acting Kit
841RA	Reverse Acting Kit

SINGLE PRESSURE REPLACEMENT CHART				
POWERS	Honeywell	JOHNSON	BARBER-COLMAN	ROBERTSHAW
TH832	TP910A,B	T-400	TK-1001, 02, 03	T18, T19
TH180	TP931B	T-401	TK-1101, 02, 03	2210
TH182	TP970A,B	T-403	TK-9001, 9101	T15, T16
TH192	TP900A,B	T-402	—	—

NEW!

Dual Pressure Retrostat Kits

Day/Night – Heat/Cool – With changeover pressures set to directly replace **Honeywell** and **Johnson**.

DUAL PRESSURE REPLACEMENT CHART			
Honeywell STATS	RETROSTAT KITS	JOHNSON STATS	RETROSTAT KITS
TP971A1003	PRK971A	T-4506-201	PRK4506
TP971A1029		T-4506-202	
TP971A1037		T-4506-203	
TP971A1045		T-4506-204	
TP971A1086	PRK971B	T-4506-209	PRK4517
TP971B1001		T-4506-217	
TP971E1004	PRK972A	T-4576-217	PRK4752
TP972A1002		T-4752-205	
TP972A1028		T-4752-206	
TP972A1036		T-4756-205	
TP972A1101		T-4756-206	

DUAL PRESSURE RETROFIT KITS				
Type	Manufacturer	Action/Changeover Pressure		Kit #
Day/ Night	Honeywell	Day (DA) 13psi	Night (DA) 18psi	PRK971A
	Johnson	Day (DA) 15psi	Night (DA) 20psi	PRK4506
	Powers	Day (DA) 18psi	Night (DA) 25psi	PRK3044
	Honeywell	Day (RA) 13psi	Night (RA) 18psi	PRK971B
	Johnson	Day (RA) 15psi	Night (RA) 20psi	PRK4517
	Powers	Day (RA) 18psi	Night (RA) 25psi	PRK3054
Heat/ Cool	Honeywell	Heat (DA) 18psi	Cool (RA) 13psi	PRK972A
	Johnson	Heat (DA) 20psi	Cool (RA) 15psi	PRK4752
	Powers	Heat (DA) 25psi	Cool (RA) 18psi	PRK3084

LOOK AT ALL YOU GET IN THIS KIT... ALL YOU SUPPLY IS A SCREWDRIVER!

- 1 – 2 Pipe Pneumatic Thermostat (DA or RA)
- 1 – Blank Thermostat Cover
- 1 – Universal Wallplate
- 2 – TT5: 6" of 5/32" Tygon Tubing w/Spring Insert
- 2 – 6" lengths of 5FRPE (5/32" Poly Tube)
- 1 – Metal Adapter Plate, stamped with coded mounting slots (numbers match installation instructions)

- 2 – Straight Airhead Adapters
- 2 – Angle Airhead Adapters
- 2 – Johnson Steel Adapter Plates
- 4 – 5/32" Spring Clamps
- 3 – 1-1/4" Slotted Metal Screws
- 4 – 1/2" Long Steel Bolts
- 4 – 5/8" Long Brass Bolts
- 4 – 1" Long Brass Bolts
- 2 – 1-1/2" Slotted Screws

- 2 – Straight Brass Bushings
- 2 – Black Rubber Grommets
- 2 – 1-1/2" Long Metal Bolts
- 2 – A45': 1/4"x5/32" Barb adapters
- 2 – 1/2" Flathead Bolts
- 2 – Metal Washers
- 2 – 1/2" Long Red Rubber Adapters
- 2 – Adjustable Range Limit Stops
- 1 – 12 Page Illustrated Instruction Sheet